




# Response Quick Step Guide

## Response Pads

### Cricket RF

The Cricket can answer true/false and multiple-choice questions (up to 6 answer choices depending on the delivery mode). Because the Cricket does not have an LCD display, there are various status lights to show connection and answer transmission.

1. **Battery Status:** The green Battery LED will blink slowly when the battery is low and should be replaced by 2 AAA batteries.
2. **Connection Status:** The green Connect LED will blink fast indicating you need to enter a Join Code. Once connected, this LED will blink slowly.
3. **Connected / Answer Received:** LED will be green for 2 seconds if connected or the answer response was received.
4. **Not Connected / Answer NOT Received:** LED will be red for 2 seconds if your Cricket did not connect or the answer response was no received.  
  
In both cases try again to connect or send your answer.
5. **Answer Choices:** True/false and multiple choice up to 6 answer choices.

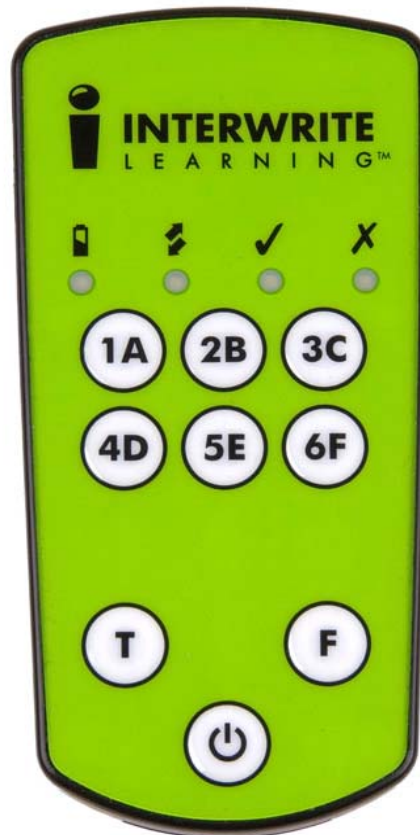

*Cricket response pad*

### Notes

---

---

---





# Response Quick Step Guide

## PRS RF Clickers

The PRS RF clickers can answer true/false, multiple-choice, multiple correct, series, numeric, and short answer questions.


### Fill in the blanks:

1. Turn the pad on or off using the power switch.

After a short period of inactivity, the response pad goes to sleep. Activate the pad by pressing any button.

2. Use the arrow buttons to navigate the questions when testing in Self-Paced mode.
3. Use the green send/enter button to send your responses.
4. Use backspace button to clear a character in the input field.
5. The menu button (\*) is used to display the setup menu or stop auto-scan.
6. Use the decimal button (.) to access special characters such as the / (fraction) and (space).

The letters A – E can be used in conjunction with the scroll buttons to submit short answers when in Alpha Mode.

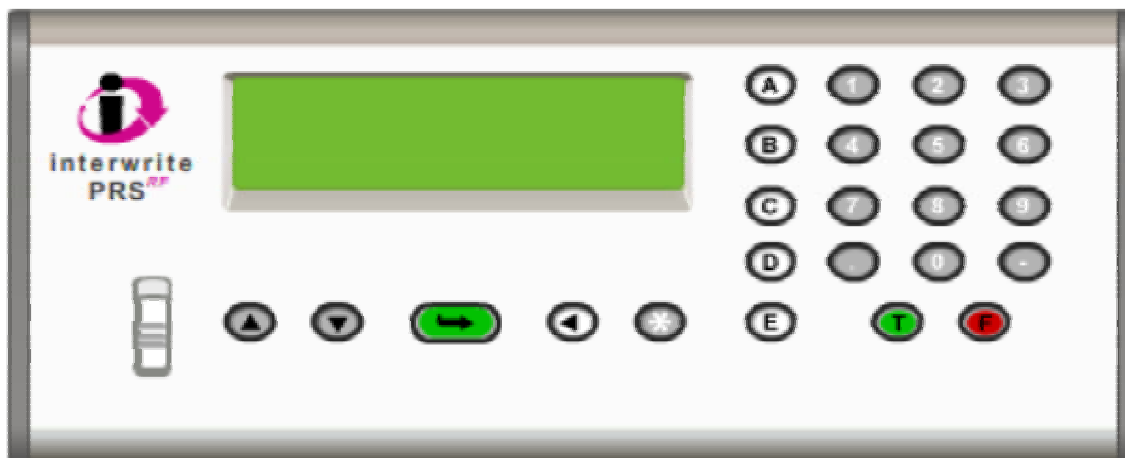

*PRS clicker*

